



# INSTALLATION INSTRUCTIONS

## Scrim

### REVIEW INSTALLATION INSTRUCTIONS CAREFULLY BEFORE INSTALLING SCRIM WINDOW FILM.

#### 1. PREPARATION:

Keep Scrim tightly wrapped until time of installment.

Tools: Window cleaning supplies, measuring tape, plastic squeegee, cutter with stainless steel spare blades, scissors.

Clean and degrease window with water and small amount of ammonia or alcohol. Dry window thoroughly with lint-free cloth.

#### 2. ASSESS JOB:

Review DFA (Drawing For Approval) and determine if job has more than one panel to be hung on a single stretch of glass.

**IF JOB HAS ONLY ONE PANEL, SKIP TO STEP 4.**

**IF JOB HAS MORE THAN ONE PANEL, CONTINUE TO STEP 3.**

#### 3. ASSESSING JOB WITH MORE THAN ONE PANEL (continued):

Scrim film material is 51" wide, with the printed space 48". Once cut to the crop/trim marks after installation, the print will be at a final width of 46.5". Each panel's name and number will be printed at the top and bottom of each panel, signifying the order in which they should be installed from left to right..

With a total 1.5" overlap/underlap between panels (0.75" marked inset from printed sides), account for a seamless alignment when installing. Use the **"Double Cut" method** to hang each panel; removing both the overlap and underlap after cutting.


**When executing the Double Cut, place a scrap piece of scrim underneath the section to be cut to avoid scoring or scratching the underlying glass.**

4. **INSTALL:**  
Unroll first panel of Scrim. **Notice the printed crop marks and .75" bleed of printed design.**

Cut the scrim with scissors, leaving about 3 to 4 inches of **unprinted fabric beyond the printed bleed**, to allow for easy handling.



From the top of the panel, peel off the backing paper behind the Scrim down about 6 inches, and fold it.

Align the Scrim with the top of the window, and press the film gently onto the glass. Gently peel the remaining backing paper little by little, in 6-8 inch sections, while gently pressing the film onto the glass from top to bottom and middle to sides.

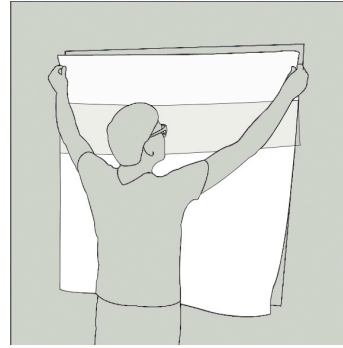


5. **INSTALL (continued):**  
In case of bubble or crease, gently pull film from the glass, without applying tension, up beyond the bubble/crease (A).

Then allow film to fall smoothly on window, using your hand or squeegee to follow behind. Do NOT use the squeegee to force bubbles or creases by pressing. This can cause permanent damage to product.

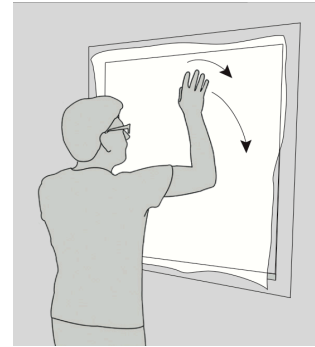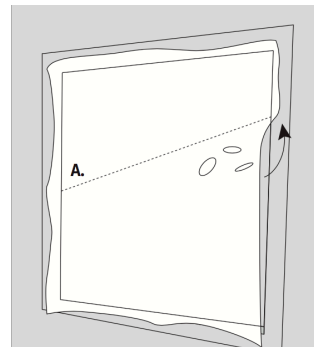


6. **INSTALL (continued):**  
When Scrim is perfectly flat, use the squeegee to smooth and adhere it to the glass. Press from the middle outwards (see image), covering the entire surface well, including edges and corners.

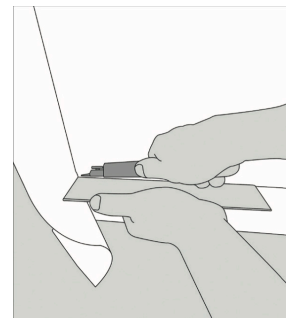

7. **CUT:**  
Place squeegee or straight-edge alongside window silicon joint, and, using a cutter with a new blade, carefully cut to remove excess film with a strong, steady pressure and movement.

It is advised to use a new blade every 2 yards and for every corner to avoid tearing the fibers of the film.

**For best results, leave a 1-3mm gap between the silicon joint and Scrim film.**

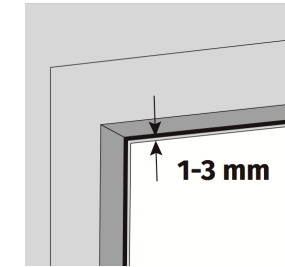

8. **SMOOTH & FINISH:**  
Using the squeegee, apply a strong pressure over entire Scrim film surface, moving horizontally and vertically to activate the glue and avoid the formation of bubbles.

